



REPLACING A SOAP OR SANITISER POD

TO OPEN THE COVER:

Your dispensers have keyless entry. Keyless dispensers can be opened by firmly pushing the release button located on the underside of the dispenser, in the middle towards wall-end of the dispenser and gently pulling the dispenser cover up at the same time.

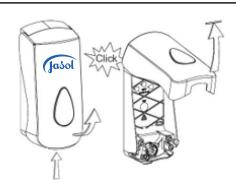

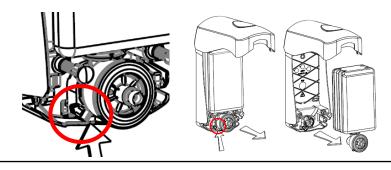

TO REMOVE AN EMPTY SOAP / SANITISER POD:

Push the green tab on the left-hand side upwards to release the pod and pull the empty pod forward to remove at the same time.

TO INSERT A NEW SOAP / SANITISER POD:

Line the blue socket of the pod up to the dispenser so that it sits in the middle of the green ring and push in firmly until the pod 'clicks' into place. Close the cover firmly and push a few times to ensure the cover has connected to the pod and product is dispensing with ease.

